


Шаровые наконечники серии SQZ

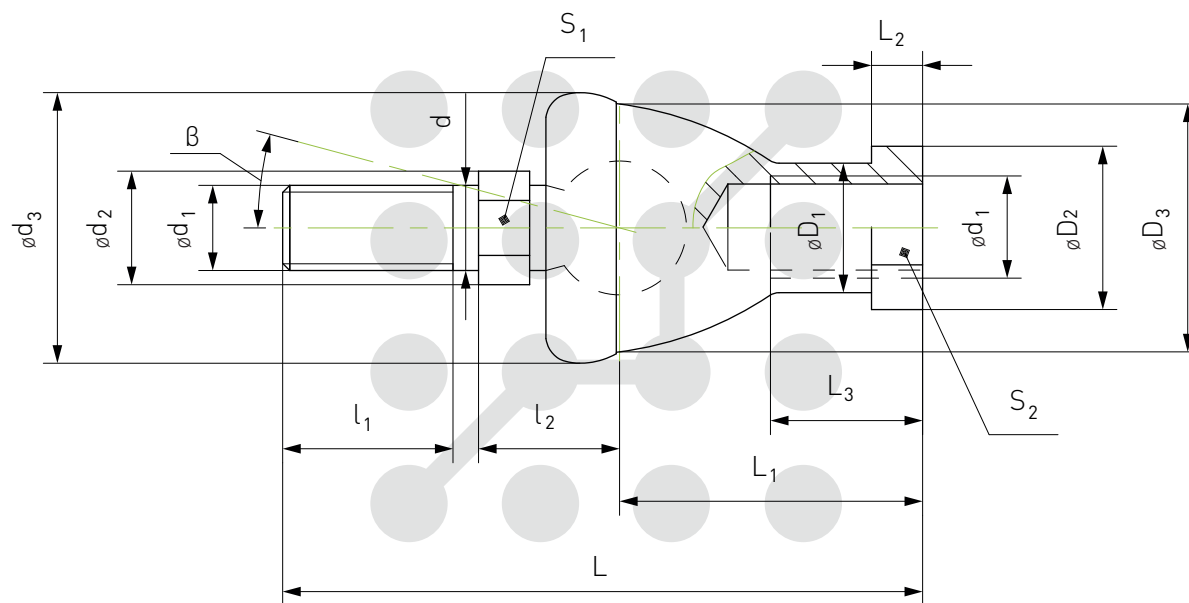

Единицы измерения: мм

Обозначение	ød	ød ₁	ød ₂	ød ₃	øD ₁	øD ₂	øD ₃	L	L ₁	L ₂	L ₃	l ₁	l ₂	S ₁	S ₂	β°	Грузоподъемность кН	Масса, кг
SQZ5-RS	5	M5×0.8	9	20	9	11	17	46	24	4	12	8	11	7	9	15	2.8	0.025
SQZ6-RS	6	M6×1	10	20	10	13	20	55	28	5	15	11	12.2	8	11	15	3.7	0.041
SQZ8-RS	8	M8×1.25	12	24	12.5	16	24	65	32	5	16	12	16	10	14	15	5.8	0.075
SQZ10-RS	10	M10×1.25	14	30	15	19	28	78	35	6.5	18	21	19.5	11	17	15	8.4	0.12
SQZ12-RS	12	M12×1.25	17	32	17.5	22	32	84	40	6.5	20	17	21	15	19	15	11	0.18
SQZ14-RS	14	M14×1.5	19	38	20	25	36	103	45	8	25	22	23.5	17	22	11	15	0.27
SQZ16-RS	16	M16×1.5	22	44	22	27	40	112	50	8	27	23	25.5	19	22	11	15	0.36
SQZ18-RS	18	M18×1.5	23	45	25	31	45	130.5	58	10	32	25	31	20	27	11	19	0.54